

Repairs Needed:

- REMOVED PLASTIC TRIM HOLDING LIGHTING FROM ROOF
- INSPECTED ROPS AND FOPS CLOSELY
- MANUFACTURER SAFETY RULES FOR ROPS AFTER ROLL OVER REQUIRES REPLACING CAB
- PERFORM USED EQUIPMENT INSPECTION FOR UNIT- NOTED RECOMMENDED REPAIRS
- FRONT DRIVELINE U-JOINTS REQUIRE REPLACEMENT
- REAR SWING UNIT AND BOOM BASE REQUIRES FULL REBUILD OF PINS AND BUSHINGS
- SMALL LEAKS FOUND AROUND MACHINE REQUIRING REPAIR

REMOVE AND REPLACE CAB

- INSTALL NEW GLASS WINDOWS
- TRANSFER INTERIOR COMPONENTS AND ELECTRICAL
- (1.0) [47625374] FRAME CAB
- (2.0) [395793A1] STRIP PROTECTION
- (1.0) [84246308] CAB GLASS
- (1.0) [84246307] CAB GLASS
- (1.0) [84246306] GLASS
- (1.0) [48083634] SEAL
- (1.0) [87435929] FRAME WINDOW
- (1.0) [352208A1] GLASS CAB
- (1.0) [87434783] WINDOW ASSY
- (1.0) [84339225] CAB
- (1.0) [90338095] SEAL
- (1.0) [90338094] SEAL
- (1.0) [84339224] GLASS
- (1.0) [48083634] SEAL
- (1.0) [48083633] SEAL

- (1.0) [394707A1] STRIP RUBBER
- (1.0) [390838A1] STRIP RUBBER
- (1.0) [84261869] GLASS
- (1.0) [84261868] GLASS
- (1.0) [84224327] FRAME
- (1.0) [84224312] FRAME
- (2.0) [87669401] WIPER BLADE
- (2.0) [84562946] WIPER ARM
- (2.0) [87301972] LAMP FLASHER
- (2.0) [87301973] LAMP FLASHER
- (2.0) [87703632] KIT
- (2.0) [47682629] LAMP WORK
- (1.0) [84236850] LIGHT
- (8.0) [87584890] LIGHT ASSY.
- (6.0) [47682620] LAMP WORK
- (1.0) [84543626] HARNESS WIRE
- (1.0) [47533370] HARNESS WIRE
- (1.0) [84543628] HARNESS WIRE
- (1.0) [47533373] HARNESS WIRE
- (1.0) [84337824] BEACON
- (2.0) [86541970] BOLT
- (4.0) [411892A1] ISOLATOR
- (6.0) [47384148] WASHER
- (2.0) [87655044] WASHER SPECIAL
- (2.0) [1148521] BOLT

ADDITIONAL REPAIRS RECOMMENDED

COOLING SYSTEM:

- CHANGE SERPENTINE AND AC BELTS

TRANSMISSION:

- REPLACE FRONT DRIVELINE U-JOINTS
- REPAIR OIL LEAK AROUND BELL HOUSING

AXELS AND DIFFERENTIALS

- REPAIR OIL LEAK FROM FRONT AXLE OUTPUT SHAFT

VALVE CONTROL:

- REPAIR LEAK AT SOLENOID

STEERING:

- TIE ROD END BOOTS TORN ON BOTH SIDES

BACKHOE ATTACHMENTS:

- MAST TO MAIN FRAME: REPLACE PINS, BUSHINGS, AND SHIMS
- MAST TO BOOM: REPLACE PINS, BUSHINGS, AND SHIMS
- STABILIZER CYLINDERS- REPAIR LEAK AT FITTING ON RH CYLINDER
- BOOM CYLINDER: REPLACE PINS, BUSHINGS, AND SHIMS
- BUCKET LINKAGE- REPLACE PINS, BUSHINGS, AND SHIM